

Manual (3 Phase kWh Meter PG-EM4)


Display sequence of multifunction dual source meter (LCD) 3 Phase kWh Meter PG-EM4

| | |
|----|-----------------|
| 1. | METER ID |
| 2. | METER SERIAL No |
| 3. | CT Ratio |
| 4. | PT Ratio |
| 5. | EB (KWH) |
| 6. | DG (KWH) |

Programming Guide:

- Press UP & DOWN Key Together For 5-10 Second To enter to programming mode.
- Default password is 0 - 100 use UP & DOWN Key to enter password.
- To Set CT ratio use UP & DOWN key.
 (NOTE: meter accepts CT ratio directly instead of e.g., 200/5amp means to set 200/5amp we need to enter 40 in CTratio or to set 150/5amp we need to set 30 or to set 30/5amp need to set 6 as CT ratio)
- To set PT ratio use UP & DOWN key.
 (NOTE: meter accepts PT ratio directly instead of e.g., 200/5 means to set 33KV/110volt we need to enter 300 in PT ratio or to set 11KV/110 volt we need to set 100 or to set 6.6KV/110 volt need to set 60 as PT ratio)
- Next is meter ID To set CT ratio use UP & DOWN key.
- Baud Rate IS 9600 by default parity is none by default.

Connection Diagram :-

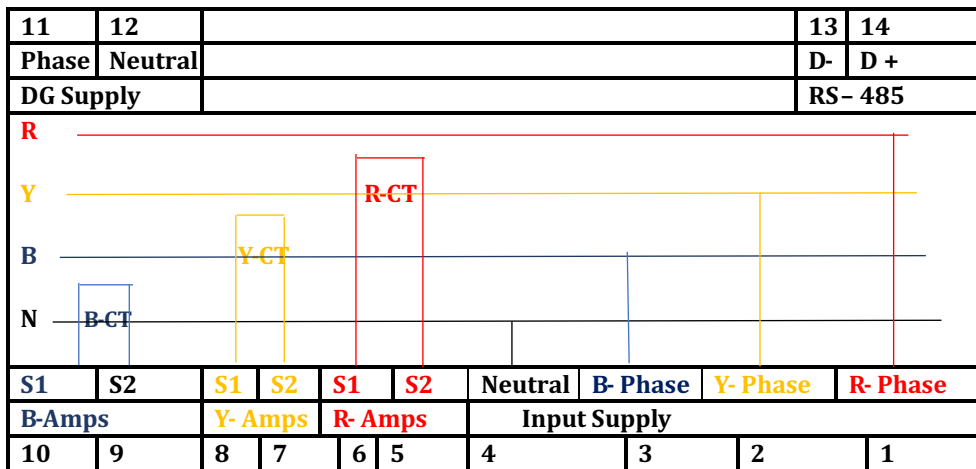

Powertrac Meters Pvt. Ltd.

Reg. Office : 92/252, Gokhle marg, Shipra path, Agrwal farm,
 Mansarover, Jaipur-302020
 Works :- 127-128, MIA, MADRI, Udaipur, Rajasthan, 313004
 email :- powertracjaipur@gmail.com, Visit us : www.powertracindia.com